



CONSOLE VAULT®

THE ORIGINAL IN-VEHICLE SAFE™

800-878-1369 www.consolevault.com

CV Elite Lock User Experience (8101)



Combination Reset Steps:

1. The combination is factory set to unlock with the number dials set at 0-0-0-0.
2. The number dials must be set to the unlocking combination prior to resetting.
3. Locate reset button at the 3 o'clock position on the upper lock housing (**Image #B - Green Arrow**).
4. Press and hold down the reset button with a paperclip and **KEEP HOLDING BUTTON DOWN DURING** Step 5.
5. Set your combination by rotating the number dials to the desired combination.
6. Release the reset button and your new combination is set!



Unlock/Lock Steps:

1. Locate push button at the 9 o'clock position on the upper lock housing (**Image #A - Blue Arrow**).
2. To unlock from closed/locked position (**Image #1**), rotate the number dials to the correct combination, press the push button, and turn lock to open/unlocked position (**Image #2 and #3**).
3. To lock, turn and pass the locked position from **Image #1** as shown in **Image #4** (the Lock will engage as you pass). Return the logo to 6 o'clock and rotate one or more number dials. **Your safe is now locked!** You can verify this by turning it clockwise and confirming the cam does not rotate with the lock and the safe does not open.

NOTE: You will notice the lock can spin while in the locked position without unlatching. This is a security feature we refer to as Free Rotation to prevent criminals from twisting and breaking the Elite Lock, keeping your valuables secure.

